

English 1 (6)

# SB, Cable & plug case, W70P, 60-2021

#### SYMPTOM/DESCRIPTION

Wrong cable mounted and for some machines only the plug wrong mounted.

#### **AFFECTED UNITS**

All machines from 2017 can be affected.

## **CORRECTIVE ACTION**

Send the serial number of the machines that have been repaired to techsupport.cp@husqvarna.se

Art	Machine	Land	Pump	Comment	
967 75 83-01	W70P		590 43 51-01	Denmark	
967 75 81-01	W70P		590 43 51-01	-	
967 75 81-02	W70P		590 43 51-01	-	
967 75 81-04	W70P		590 43 51-01	-	
967 75 81-06	W70P		590 43 51-01	-	Cable change and plug assembly.
967 75 81-07	W70P		590 43 51-01	-	Follow step 1 to 20 and the check points.
967 66 47-02	W70P		590 43 51-01	AU	and the encor points.
967 66 47-03	W70P		590 43 51-01	BR	
967 66 47-04	W70P		590 43 51-01	EU	
967 66 47-06	W70P		590 46 97-02	110V UK	

English 2 (6)

#### **PROCEDURE**


- Cut the pump cable close to the pump.
   Loosen the cable gland on large tank before pulling out the cable.
- 2. Remove the pump out of the W 70 machine.
- 3. Loosen the nut and slide out the strain relief clamp out of the cable.
- 4. Remove the pump top cover by unscrewing 4 bolts as shown in the image.



- 5. Cut the existing cables.
- 6. Prepare the new cable on one end such that grounding cable is longer phase and neutral.


English 3 (6)

7. Cut the cables in the pump so the ground cables is longer than phase an neutral.

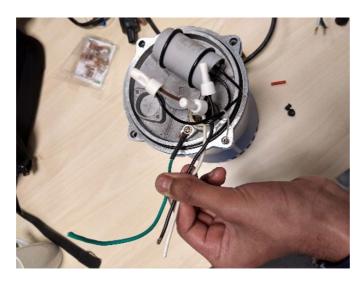

- 8. Strip the cords 11mm and connect them with the splicing connector.
  - Green/Yellow to Green
  - Brown to Black
  - Blue to White



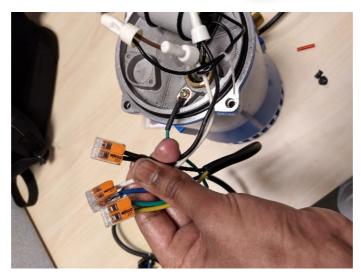

- 9. Check that all connections are secure and are electrically safe.

  Make sure grounding wire is longer than other wiring assemblies.
- 10. Replace the O-ring that is on the flange.
- 11. Pull the cable through the cable gland on the lid.

English 4 (6)

# 12. Close the pump. (14Nm)



- 13. Close the cable gland on the pump. (8Nm)
- 14. Place pump back to the W70P machine.
- 15. Pull the cable through the cable gland on the tank.
- 16. Reuse the power plug that is assembled on the "old" power cord.



English 5 (6)

- 17. Prepare the new cable on the other end such that grounding cable is longer phase and neutral.
- 18. Make sure the strain relief is correctly installed and is mounted over the rubber on the cable.



- 19. Install each induvial wire in the plug. Make sure no tension or abnormal bending of the wires.
- 20. Close the power plug.

English 6 (6)

# Check points valid for all changes

1. Control measure the continuity of the protective conductor between PE on the plug and metal on the pump.

Reasonable value is  $0-2 \Omega$ .

(Press hard with the measuring tip on the pump as dirt can result in a worse value).

2. Check the pump insulation resistance between PE on plug and phase / neutral pins on plug.

The result of the measurement must not show a value lower than 1.0 M $\Omega$  when the measuring voltage is at least 500 V DC.

(Feel free to use test adapter with measuring cables).

3. Connect the machine to the power and check if the machine and vacuum pump works appropriately.

PARTS TO ORDER: 535 52 44-01, CABLE KIT, W70P EU



### **WARRANTY INFORMATION**

The normal warranty policy applies

#### **Revision History**

Rev.	Date	Order id.	Description
Α	2021-07	00011713	Created