

SB, Depth adjustment bearing assembly, FS 400 LV, 2013-01

SYMPTOM/DESCRIPTION

When replacing the depth adjustment bearing on FS 400 LV to the SKF brand bearing (p/n 504 79 89-01) it is necessary to rotate the inner part of the bearing before mounting it. See Picture 1. Otherwise it won't be possible to get the blade to its highest position.



Picture 1 Rotate the inner part of the bearing 180°

Picture 2 show how it will look like when the inner part of the bearing is rotated and the shaft is mounted.



Picture 2 The SKF bearing correct mounted on the machine.