

## SB, Stainless steel water valve, PP440, PP480, PP490, PP492, 2020-12

### SYMPTOM/DESCRIPTION

New water valve in stainless steel that prevents it from breaking when water left in the valve freezes.

This new water valve (figure 1) will be introduced as standard on all PP490 and PP492 for all markets.



Figure 1: New valve



Figure 2: Old valve

### AFFECTED UNITS

Model	All units after below S/N is sent with the new water valve
PP440	Will be updated when implemented
PP490	Will be updated when implemented
PP492	Will be updated when implemented

### PARTS INFORMATION

Description	Old Part No.	New Part No.
Water valve	505527301	505527302


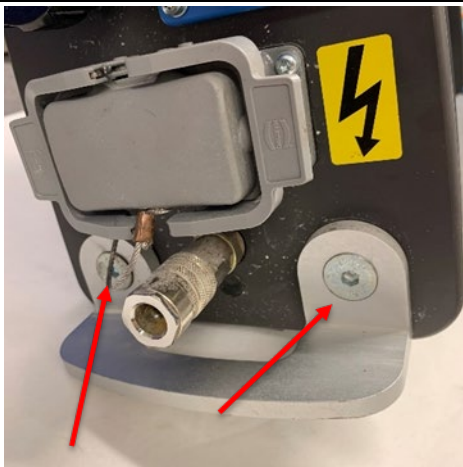

### WARRANTY INFORMATION

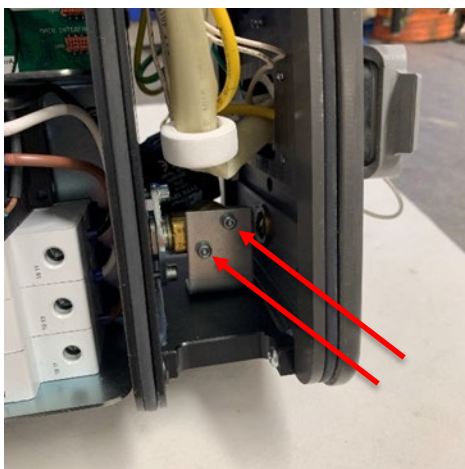
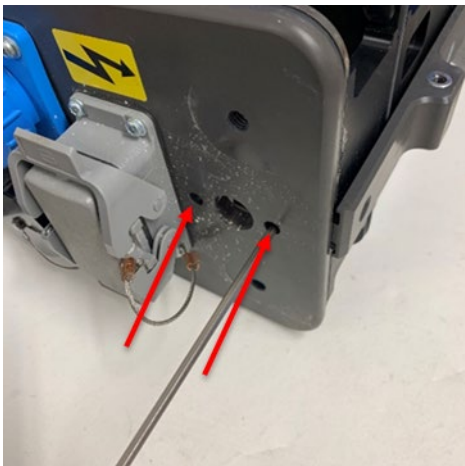
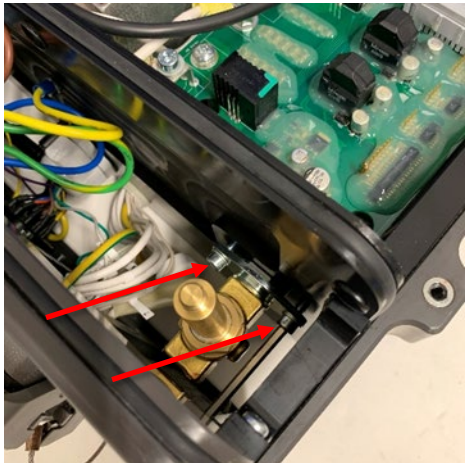
The normal warranty policy applies.

### PROCEDURE

For replacing only the solenoid: Follow the steps on page 142 in the Workshop Manual for PP490 or PP492.

For replacing the whole water valve: Follow step 1 to 7 below:

1.	Remove the side panels of the Power Pack.	
2.	Remove the solenoid from the water valve by unscrewing the copper nut.	
3.	Remove the bracket.	
4.	Remove the quick coupling. Don't forget to hold against on the water valve so that it doesn't turn.	

5.	Remove the screws (don't forget the screw under the PP).	
6.	Remove the plugs.	
7.	Remove the screws and replace the water valve.	

#### Revision History

Rev.	Date	Order id.	Description
A	2020-12	SB-6229	Created