

## SB, HSH, PACE 100-B380X and 100-B750X, 2022-02

### SYMPTOM/DESCRIPTION

This Service Bulletin describes how to connect the PACE batteries, models B380X and B750X to the Husqvarna Service Hub (HSH).

### AFFECTED UNITS

100-B380X - All

100-B750X - All

### PROCEDURE

#### Husqvarna Service Hub:

To connect PACE batteries 100-B380X and 100-B750X to Husqvarna Service Hub you will need Interface Box 598072801 for connecting to your computer and Adapter Cable 529471501 to connect the PACE battery to the Interface Box (see Figure 1 below).

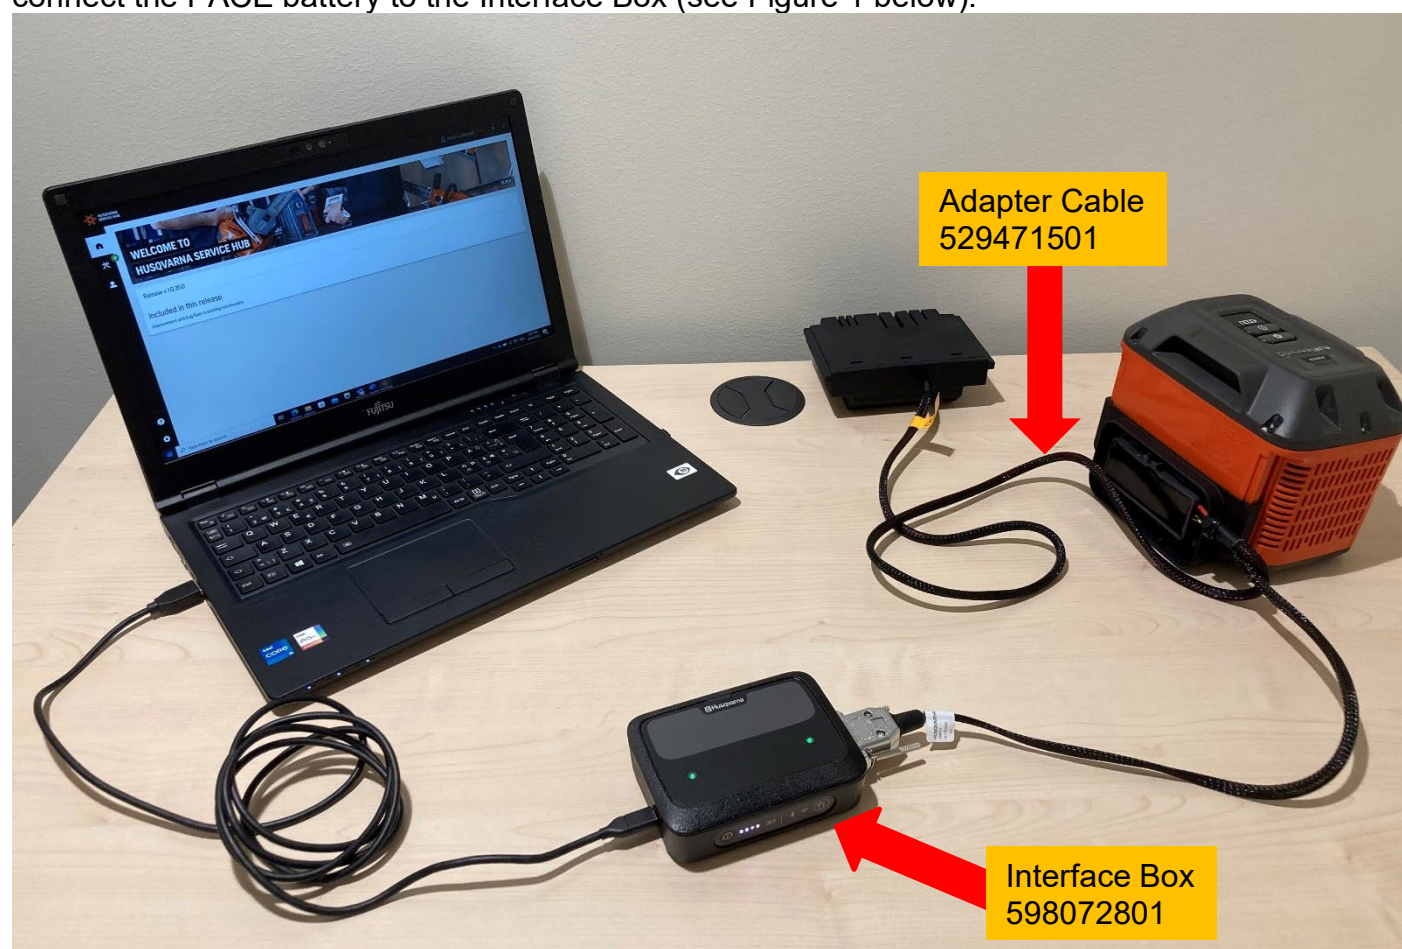


Figure 1: Connecting Pace battery to Husqvarna Service Hub using Interface Box

If Interface Box is not available, it is also possible to connect to Husqvarna Service Hub using Kvaser Adapter 574035702 (to connect to your computer) and Adapter 529677001 in between Kvaser Adapter and Adapter Cable 529471501, which connects to the PACE battery (See Figure 2 below).

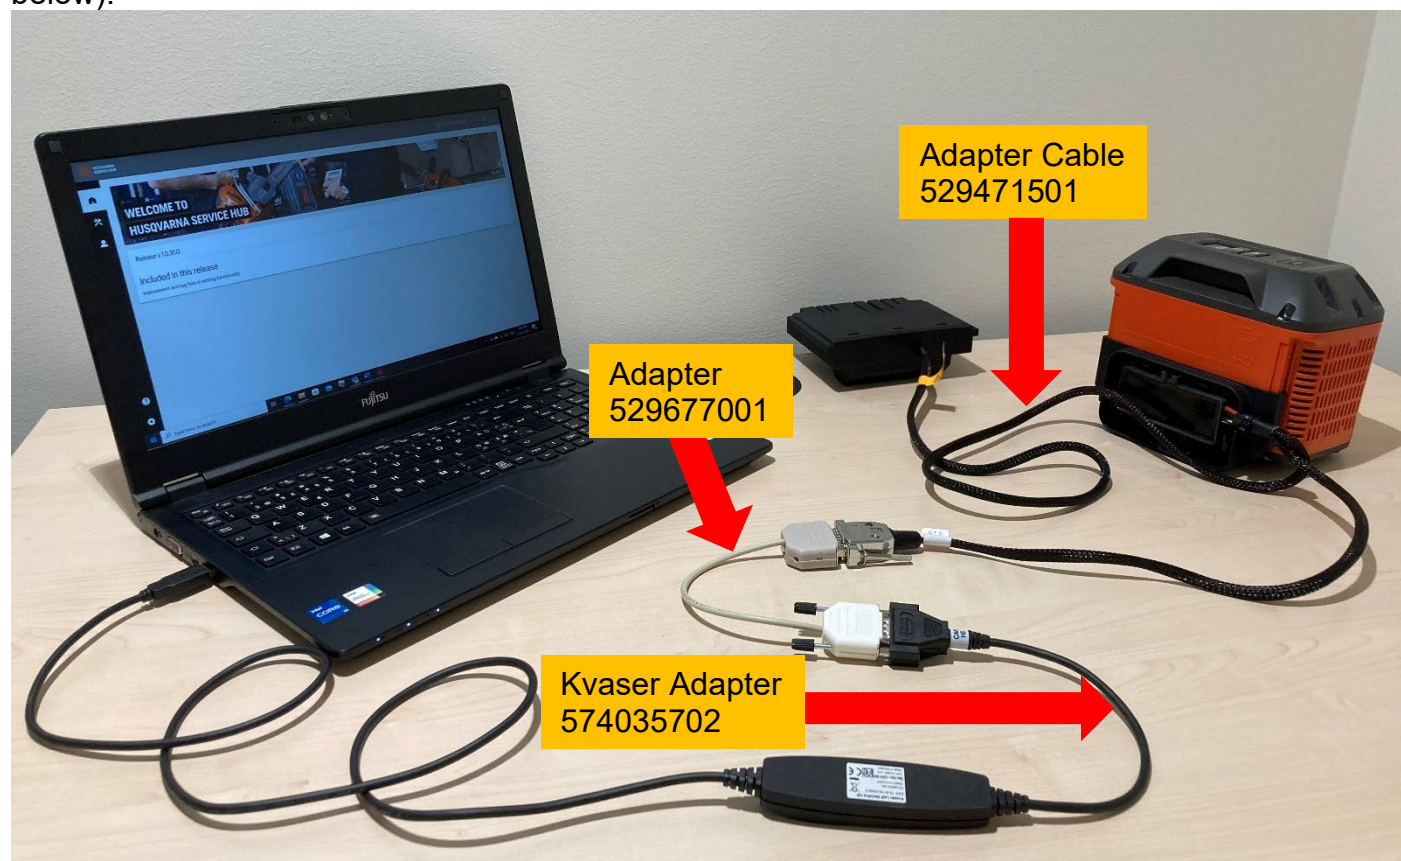


Figure 2: Connecting Pace battery to Husqvarna Service Hub without Interface Box

## PARTS INFORMATION

598072801	INTERFACE BOX
529471501	CABLE ASSY ADAPTER CABLE
574035702	KVASER CAN ADAPTER
529677001	CABLE ASSY ADAPTER

## Revision History

Rev.	Date	Order id.	Description
A	2022-02	00017621	Created
B	2022-08	00022660	Some article numbers changed in text and figures.